

EL-SMS-2G-VAC

Vaccine Temperature Monitor with SMS Alerts



Receive SMS alerts as soon as the temperature triggers an alarm.

- High and low temperature alarm level notifications
- Daily, weekly or monthly summary SMS messages
- Setup using the free EasyLog SMS Apps available from Google Play and the App Store
- -40 to 60°C (-40 to 140°F) measurement range using supplied probe
- Glycol bottle probe mimics vaccine in storage for accurate temperature monitoring.
- Powered by four Alkaline AA batteries



EasyLog SMS Mobile Apps available from Google Play and the App Store

The EasyLog SMS App can be downloaded for free from Google Play or the App Store, allowing you to manage your EL-SMS devices with ease.




- Animated walkthrough of the setup process
- Easily configure your EL-SMS unit and set temperature alarms
- Receive alarm notifications & regular summary messages
- Historical view of all messages received from your devices

Within the app you can set the temperature alarm levels, set the frequency of summary messages (which contain minimum, maximum, and average readings since the last summary), as well as defining up to three contacts to receive SMS notifications.

Once the options are set the App will guide you through the process of sending a configuration message to the device. Your EL-SMS-2G-VAC is now monitoring - ready to send alarm and summary notifications.

Alarm and summary messages can be sent to any device capable of receiving SMS messages, but the EasyLog SMS App enables you to monitor multiple EL-SMS-2G-VAC devices in one easy package.

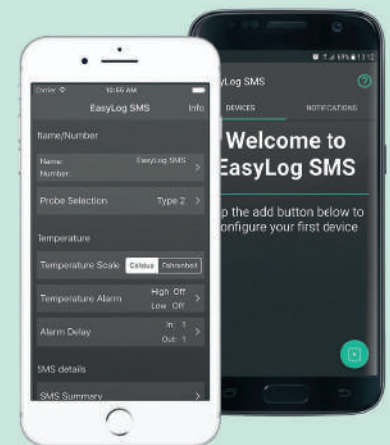

SPECIFICATIONS

Glycol Probe <i>(Supplied)</i>	Measurement range	-40 to 60°C (-40 to 140°F)
	Accuracy (-10 to 60°C / 14 to 140°F)	±0.1°C (±0.2°F)
	Accuracy (-40 to 60°C / -40 to 140°F)	±0.3°C (±0.6°F)
Accuracy (Monitor error)		±0.1°C (±0.2°F)
Internal resolution		0.1°C (0.1°F)
Operating temperature range		-20 to 40°C (-4 to 104°F)
Battery life		1 year (at 25°C and daily summary message)
Dimensions		105 x 105 x 29mm (4.1 x 4.1 x 1.1")
Frequency Band		Quad-Band 2G GSM (850/900/1800/1900MHz)

ACCESSORIES

BAT 1V5 AA	Replacement battery (4 required)
EL-P-VAC	Replacement glycol thermistor probe
EL-PROBE-EXTENDER-5.0M-TP	Probe extension (5.0m)
EL-PROBE-EXTENDER-10.0M-TP	Probe extension (10.0m)

INCLUDED IN THE BOX



x4 BAT 1V5 AA	Batteries
EL-P-VAC	Glycol thermistor probe
M-EL-SMS-WM	Mounting Bracket
CAL-TEMP-UK	Temperature Calibration certificate

EL-SMS-2G-VAC



Vaccine Temperature Monitor with SMS Alerts

EL-SMS-2G-PROBE-G

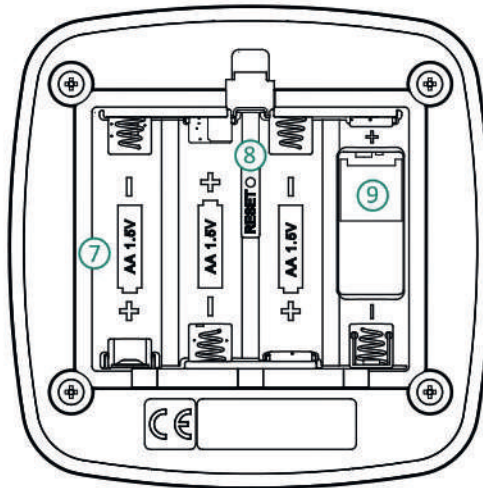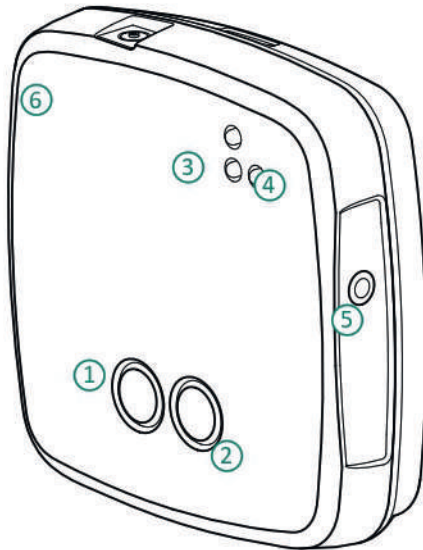

- ① Status button
- ② Stop button
- ③ Status LEDs
- ④ Netlight
- ⑤ External temperature probe port
- ⑥ Sounder
- ⑦ Battery Bay
- ⑧ Reset switch
- ⑨ SIM card holder

The EasyLog SMS User Manual contains complete information on all of the features of your EL-SMS-2G-VAC, which can be found at: <https://www.lascarelectronics.com/easylog-data-logger-el-sms-2g-vac/>

SIM CONTRACT

To use your EL-SMS-2G-VAC you will need to install a pre-registered micro SIM card from a 2G enabled service provider of your choice. It is important that no PIN code is enabled as this will prevent the unit from operating.

Visit maps.mobileworldlive.com to check for GSM coverage in your geographic location.


BATTERY INFORMATION

For reliable operation of the unit it is recommended that only high quality alkaline batteries, such as those supplied, are used.

Please refer to the EasyLog SMS User Manual for more information.

For more information visit www.lascarelectronics.com/data-loggers

THERMISTOR PROBE ACCURACY

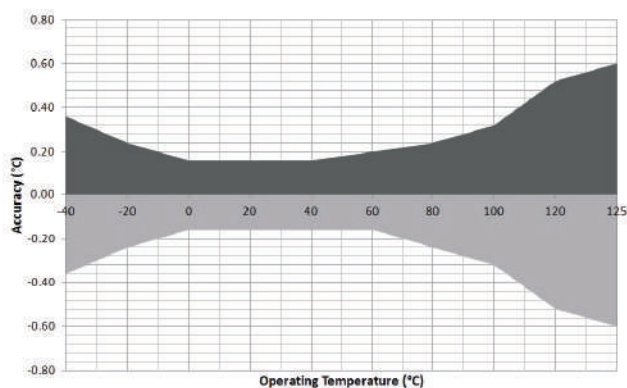

Supplied 'Glyco' Thermistor Probe
Part Number: EL-P-VAC